

ALCATEL

Temporis

05

電話機 使用手冊



簡介

本話機附有來電顯示功能，這功能由您的電信公司所提供，來電顯示功能可以讓您：

 
- 接電話前可以知道誰打電話來。
- 記錄每通電話的日期與時間。
- 記錄60通來電的號碼。
- 當您無法接聽電話時還能知道誰打來。

為了讓您可以充分使用本話機的功能，建議您把本手冊瀏覽一遍。

開始安裝前注意事項

零附件確認

請確認包裝盒內有如下列圖示的主體與零附件：

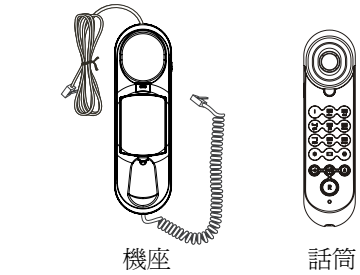

電話插座的要求

您家裡必須具備如右圖所示的RJ-11插座，如果您家裡沒有這樣的插座，請與您的電信服務商聯繫。



型號 Temporis 05-EX(TW)
10000519 (Rev.0 C/E)
12-13
中國印刷

重要安裝資訊

! 注意:在安裝或者更換電池之前必須將電話線從電話插座拔下。

- 不要在打雷的時候安裝電話線。
- 除非電話線路已經從電話網路斷開，不要拆裝電話線或者電話機。
- 在安裝或調整電話線路前請閱讀注意事項。
- 不要安裝電話插座在潮濕的環境，除非這個電話插座是專門設置在潮濕環境中使用。

 
安裝電池

重要事項:您約有60秒的時間可以更換電池，否則儲存在話機裡的資訊會消失。在更換電池前，我們建議您先把電池準備好，詳細閱讀本手冊再行更換。為防止重要資訊流失，我們建議您先把這些資訊記錄在紙本上。

您的來電顯示電話使用三個AA規格鹼性電池，用來接收與儲存來電資訊和記憶的號碼。


- 確認機座先不要連接到話筒與插座。
- 用原子筆或是螺絲起子把位於機座上面的電池盒蓋子打開。
- 裝入三顆AA的鹼性電池(電池請自行準備)，您可以參考附圖。
- 把電池盒的蓋子關上。
- 把話筒連接到機座。

重要事項:如果您打算不使用電話超過30天，請取出電池。因為電池有可能漏出電解液並損壞電話機。

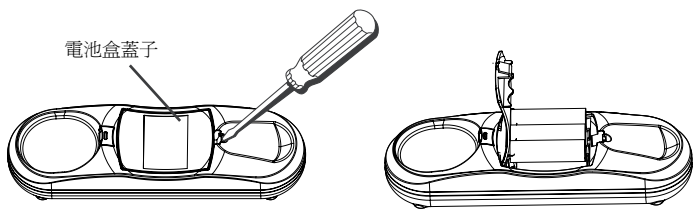

安裝電話機

 選擇一個合適的地點安裝電話機，電話機需要放置在平面上，如檯面或桌面，您也可以選擇安裝在牆上。

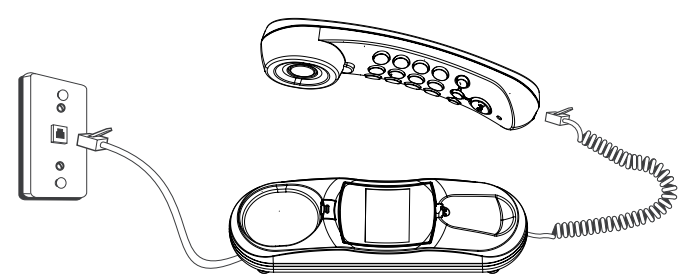

連接電話線

- 機座上的捲狀線連接到話筒。
- 機座上的電話線連接到牆上的電話插座。
- 機座上有可以調音量的開關。

- = 音量較大
- = 音量較小
- = 電話不會響

 
- 話筒放回機座

注意:如果安裝得宜，您拿起話筒可以聽到撥號音，如果沒聽到的話，請再次確認安裝步驟。


安裝電話機在牆上

您可以選擇把電話掛回機座時掉落，請將位於機座的掛鉤轉180度，才可以卡住掛鉤以防止掉落。

- 用大拇指旋轉掛勾180度。
- 電話線太長可以繞在機座後面的凹槽。
- 機座後面有兩個孔位可以提供給您掛半電話在牆壁上。

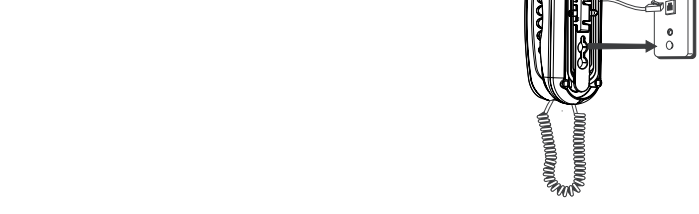

話機外觀

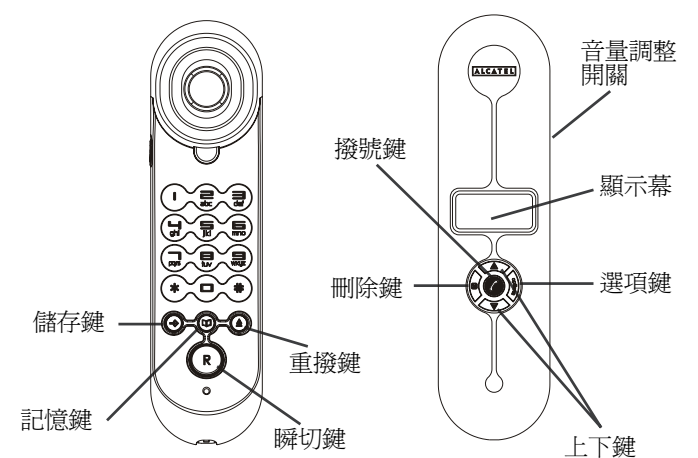 

設定來電顯示功能

注意:當設定此功能時，請勿把電話線插到電話插座，因為當您的設定還未儲存時，剛好有來電會讓這些未儲存的資訊消失。

- 把話筒掛回機座。
- 按下選項鍵(options)，顯示幕會顯示日期設定(SET 1 DATE)。
- 按上下鍵 選擇您想要的選項:
 - 選項1日期(SET 1 DATE)
 - 選項2區域碼(SET 2 CODE)
 - 選項3撥號模式(SET 3 T-P)
 - 選項4瞬切時間(SET 4 FLASH)(預設值為600ms)
 - 選項5LCD對比選項(SET 5 LCD)(預設值為3)

注意:您可以在任何時刻按刪除鍵 離開設定畫面。或是您20秒內沒有按任何鍵，將自動離開選項設定。

設定日期/時間

- 按選項鍵(options)，SET 1 DATE會出現在顯示幕上。
- 再按一次選項鍵(options)，會顯示目前設定的年份。
- 按上下鍵 / 調整年份的第一位數，再按選項鍵(options)可以跳到下一位數。
- 當年份的四個位數都調整好，按選項鍵(options)就可以開始設定月份。
- 如果您要輸入1到9月份，您只要在設定完年份後按選項鍵(options)直接設定，如果您要輸入10到12月份(兩位數的月份)，在您設定完年份後請先按下 鍵，第一個位數的10到12將會閃動，按選項鍵(options)後您可以按上下鍵 輸入月份的第二個位數。
- 重複3-4的步驟設定日，時與分。

最後再按一次選項鍵(options)以儲存設定。

當您接收到FSK來電顯示，所顯示的日期與時間都是由電信公司提供的。如果您收到DTMF來電顯示，所顯示的日期時間是由您話機上面的設定提供的。

設定區域碼

當有接收到來電顯示號碼的訊號，本話機會依據您設定的區域號碼顯示適當的號碼格式。

- 按選項鍵(options)，SET 1 DATE會顯示在顯示幕上。
- 按上下鍵 / 直到顯示幕顯示SET 2 CODE。
- 按選項鍵(options)以顯示目前區域碼的設定，如果之前都沒設定的話會顯示---。第一位數會閃，這表示您可以開始設定。
- 按上下鍵 / 設定0-9的第一位數。
- 當按到您要的数字，再按選項鍵(options)以進到下一位數。
- 重複4-5的步驟直到您的區域號碼都設定好。
- 按選項鍵(options)以儲存設定

注意:如果設定的過程中操作錯誤，只要回到前一步驟再操作一次。

設定撥號模式

- 按選項鍵(options)，SET 1 DATE會顯示在顯示幕上。
- 按上下鍵 / 直到顯示幕顯示SET 3 T-P。
- 按選項鍵(options)會顯示音頻撥號模式tone。
- 按上下鍵 / 如果您要設定到轉盤式脈衝式PULSE模式。
- 按選項鍵(options)以儲存設定。

設定瞬切(Flash)時間

您可以設定三個瞬切時間:100ms / 300ms / 600ms。
原廠設定是600ms。

- 按選項鍵(options)，SET 1 DATE會顯示在顯示幕上。
- 按上下鍵 / 直到顯示幕顯示SET 4 FLASH。
- 按選項鍵(options)會顯示原廠設定FLASH 600。
- 按上下鍵 / 以選擇您設定的100ms, 300ms或是600ms。
- 按選項鍵(options)以儲存設定。

設定液晶顯示幕(LCD)的對比

此設定可以讓您調整對比與可視角。

- 按選項鍵(options)，SET 1 DATE會顯示在顯示幕上。
- 按上下鍵 / 直到顯示幕顯示SET 5 LCD。
- 按選項鍵(options)會顯示目前設定，本話機共有1-5共5個階級可以選擇原廠設定為3，數字越高對比越大。
- 按上下鍵 / 以選擇您欲設定的對比度。
- 按選項鍵(options)以儲存設定。

電話的基本

調整音量

本話機的音量開關(VOLUME)可以讓您控制接收的音量，共有高、中、低(HI, MI, LO)三個階段可以選擇。

重複撥號

如果您想重複撥上一個撥出的號碼，您只要

- 拿起話筒。
- 按重複撥號鍵 。
- 最後一個撥出的號碼就會自動撥出。

記憶

在您啓用記憶功能之前，請確認您已經正確設定話機的撥號模式。

儲存常用的電話號碼

- 拿起話筒。
- 按下儲存鍵 。
- 按您所欲儲存的電話號碼(最多16碼)。
- 再按一次儲存鍵 。
- 按0-9您想儲存的位置，再按一次儲存鍵 。
- 掛回電話完成記憶。

注意:如果操作的過程發生錯誤，請用刪除鍵 刪除不要的數字。

改變已儲存的常用電話號碼

重複上述步驟，只要您再設定一次，話機就會儲存新的號碼。

刪除儲存的號碼

- 按撥號鍵 。
- 按上下鍵 / 選擇您要刪除的號碼。
- 按刪除鍵 ，顯示幕會顯示DELETE，再按一次刪除鍵 即可。

從常用的號碼撥號

- 拿起話筒並按記憶鍵 或是撥號鍵 。
- 按0-9您想撥的常用號碼，記憶的號碼就會自動撥送出去。

- 或是
- 在話筒掛在機座上時按下撥號鍵 。
 - 按上下鍵直到您欲撥出的號碼出現，拿起話筒，號碼就會自動撥送出去。

查看已記憶的常用號碼

- 按撥號鍵 。
- 按上下鍵 / 就可以看到儲存在常用號碼的電話號碼。

複製常用號碼到不同的記憶位置

- 拿起話筒。
- 按儲存鍵 。
- 按上下鍵 / 到您欲複製的電話號碼的位置。
- 再按儲存鍵 。
- 按下您欲存放的位置(0-9)，如果您按的数字閃動，代表這位置已經被使用。
- 按儲存鍵 把電話號碼記憶在新的位置。
- 話筒掛回機座即完成。

在常用號碼加入暫停(pause)的功能

重撥鍵 有兩種功能，如果在按重撥鍵 前先按儲存鍵 ，重撥鍵 就變成暫停鍵，暫停鍵只能用在常用號碼記憶功能中。當您撥號前必須使用到暫停功能時，就可以在儲存常用號碼時把暫停的功能加進去。例如，當您撥外線需要先按，或是要打長途電話需要先按某些號碼。

您也許需要調整暫停的長度，本話機可以讓您設定1-9秒，如果沒設定的話原廠幫您設定4秒鐘。步驟如下

- 拿起話筒。
- 按儲存鍵 。
- 按重撥鍵 。
- 依據您的需要按1-9的数字(1代表1秒, 2代表2秒...)。
- 按儲存鍵 。
- 按瞬切鍵 或是掛上電話以完成設定。

使用瞬切功能

瞬切功能是為了使用您電話公司提供的特殊服務，像是來電插撥服務。因每家電信公司的服務不同，使用上可能會與本操作手冊所敘述的不同。

欲在通話中同時接聽另一通來電：

- 當您在通話中聽到有插撥的信號，按下並放開瞬切鍵 **R**。原先通話中的電話會被保留，插撥的電話可以被接通。

 
欲回到原先被保留的電話，並讓插撥的電話保留：

- 再按一次瞬切鍵 **R**，原先被保留的電話就可以接通，並讓插撥進來的電話變成保留狀態。

暫時使用音頻撥號模式(tone dialing)

如果您的電信公司提供脈衝式(pulse)服務，您可以暫時改成音頻撥號服務(tone)。在您按完欲撥打的號碼後，按住並放開*星號鍵，您就可以使用只提供在音頻撥號的服務，像是銀行要求輸入數字鍵以提供電話理財服務。當您掛斷電話後，本話機會自動轉回脈衝式服務。

來電顯示號碼的功能特色

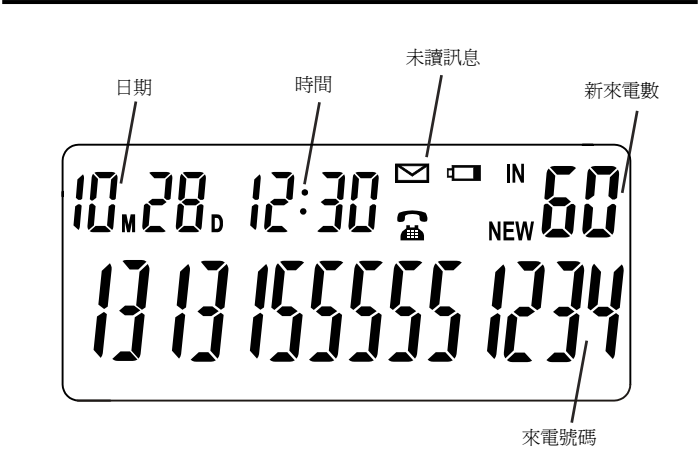

顯示幕訊息總覽

在沒有操作電話的情況下，顯示幕會顯示訊息總覽畫面，包括目前的日期時間與待查閱的新來電數。當有新的電話進來，顯示幕會暫時顯示來電號碼，60秒內會回到訊息總覽畫面。

接收及儲存來電顯示的號碼

本話機接收並顯示電信公司傳送來的來電訊息，這訊息可包含電話號碼、日期與時間。除此之外，本話機會把這些來電訊息記錄下來供您日後查閱。當記憶體占滿時，新的來電記錄會取代最舊的來電記錄。當您有新的來電沒有被讀取時，顯示幕會顯示新來電NEW。

查閱記錄的來電號碼

- 按上鍵 或是下鍵 可以查閱最新的來電號碼。
- 按下鍵 可以查閱從次新的來電號碼到最舊的來電號碼。
- 按上鍵 可以查閱從最舊的來電號碼到最新的來電號碼。
- 當所有的來電號碼都查過後，顯示幕會顯示結束(END)。

刪除個別的來電號碼記錄

當您查閱來電記錄時，可以刪除其中的一筆記錄。在顯示幕顯示的是您欲刪除的號碼時按下刪除鍵 ，顯示幕會顯示DEL ONE，只要再按一次刪除鍵這筆記錄就會被刪除。

刪除所有的來電號碼記錄

- 當您查閱來電記錄時，只要按刪除鍵 超過四秒鐘，DEL ALL?會出現在顯示幕上。
- 再按一次刪除鍵 所有來電記錄都會被刪除。

回撥

當您查閱來電記錄時，按下撥號鍵 就可以回撥給顯示在顯示幕上的電話號碼。

如果您有設定區域碼

- 使用上下鍵 / 查詢您欲撥打的電話號碼。
- 按撥號鍵 ，顯示幕右上角會出現10秒的倒數，這讓你知道您剩下多少時間可以維持這個操作。如果您在10秒結束前開始編輯號碼，倒數會從頭開始。
- 完成您欲更改的號碼。
- 在10秒結束之前拿起話筒並按下撥號鍵就可撥出您編輯完後的號碼。

如果您沒有設定區域碼

- 使用上下鍵查詢您欲撥打的電話號碼，這時候即使是相同區域的市內電話，您的來電記錄仍然會顯示當地的區域號碼，所以您必須在回撥前把區域號碼刪除。
- 依上面的2-4步驟就可以完成更動並回撥您要的號碼。

注意:如果拿起電話(PICKUP PHONE)出現在顯示幕上，您無法更改要撥出的號碼，因為這訊息是由電話公司所發出，他們知道現在的號碼格式是正確的，不需要被更改(只有部分國家地區有支援本服務)。當您拿起話筒，顯示的號碼就會自動撥出。

未讀訊息顯示(依照當地電信公司服務有所不同)

當您有訂閱當地電話公司提供的語音信箱服務時，本功能讓你知道您有新的留言。

顯示幕其它顯示訊息

- 當您看到如左的訊息，這表示電池的電量已低，請盡快更換電池，才能使來電號碼顯示功能正常運作。

錯誤訊息及解決之道

沒有撥號音

- 檢查所有的線是不是都已經連接完整，線本身是不是完好無破損。
- 檢查瞬切勾鍵是不是卡住。

顯示幕沒有顯示

- 更換新的電池。
- 確定電池安裝的方向是對的。

當電話鈴響時顯示幕沒有顯示任何訊息

- 確認您的電信公司有對您提供來電顯示功能服務。
- 接聽電話前多等一聲響鈴。

電話響鈴不響

- 確認您沒有設定到靜音。
- 同一條電話號碼也許裝太多分機，您可以把其他分機移除看看。
- 確定有撥號音，如果沒有的話請參照前面的步驟。

對方無法聽見您的聲音

- 確認聽筒線有正確地安裝到話筒。
- 確認同一號碼的分機是掛上的，如果分機沒掛上，音量會變得很小。

無法撥出號碼

- 確認您設定的撥號模式是正確的，請參照SET 3 T-P。

ALCATEL

Temporis

05

Telephone User's Guide



INTRODUCTION

Your Caller ID phone stores and displays specific information, provided by your local telephone company, to subscribers of Caller ID or similar caller identification services. Your Caller ID phone enables you to:

 
- Identify callers before you answer the phone.
- View the time and date of each incoming call.
- Record up to 60 Caller ID messages sequentially.
- Know who called while you were away.

To get the most from your new phone, we suggest that you take a few minutes right now to read through this user's guide.

BEFORE YOU BEGIN


PARTS CHECKLIST

Make sure your package includes the following items:

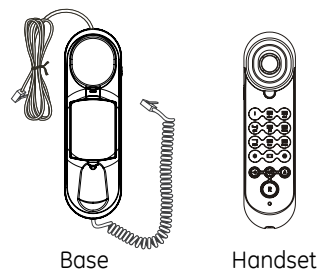

TELEPHONE JACK REQUIREMENTS

 To use this phone, you need an RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

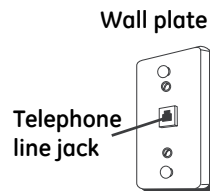

Telephone line jack



Model Temporis 05-EX(TW)
10000519 (Rev.0 C/E)
12-13
Printed in China

Alcatel logo and Alcatel name are trademarks of Alcatel and used under license by Thomson Telecom.

IMPORTANT INSTALLATION INFORMATION

CAUTION: Disconnect the phone cord from the wall outlet before installing or replacing the batteries.

- Never install telephone wiring during a lightning storm.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

 
INSTALLING THE BATTERIES

IMPORTANT: You will have approximately 60 seconds to replace the batteries before the memories stored in the handset are lost. Please read the instructions before replacing the batteries and have the batteries ready to be inserted beforehand. As a precaution, you may want to write down any stored information you do not want erased.

Your Caller ID phone uses 3 AA-size alkaline batteries for receiving and storing Caller ID records and for the numbers you use for memory dialing.


1. If both the straight and coiled line cords are already connected, disconnect them from the base unit. Place the handset aside.
2. Use a ballpoint pen or other tool to open the battery compartment door.
3. Insert 3 AA-size alkaline batteries (not included) as shown on the diagram inside the compartment.
4. Replace the battery compartment door.
5. Re-attach the line cords to the unit and check your memory locations. If installation takes longer than 60 seconds, you should re-set your memory locations.

IMPORTANT: If you're not going to use the telephone for more than 30 days, remove the batteries because they can leak and damage the unit.

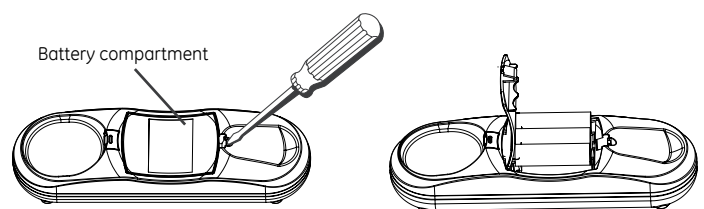

INSTALLING THE PHONE

 Choose the best location to install your telephone. Your telephone should be placed on a level surface, such as a desk or table top, or you may mount it on the wall.

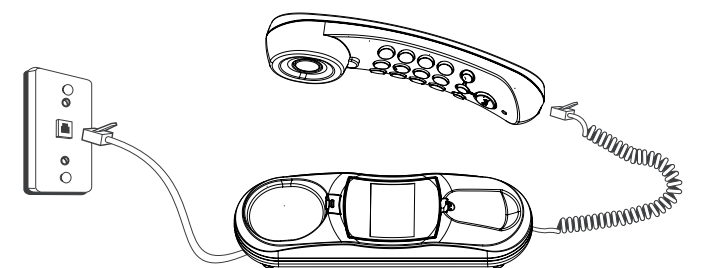

CONNECTING THE TELEPHONE LINE

1. Plug the coiled cord into the jack on the handset.
2. Plug the long straight line cord into a modular wall telephone jack.
3. Set the RINGER switch on the base to HI.

- 🔊 = HI - Sound will be loudest.
- 🔊 = LOW - Sound will be lower.
- 🔇 = OFF - Telephone will not ring.

4. Place the handset in the cradle.

 
NOTE: The unit is properly installed if you pick up the handset and hear the dial tone. Otherwise, recheck all the installation steps.

WALLMOUNTING THE PHONE


Your telephone may also be mounted on the wall (wall plate not included).

NOTE: To prevent the handset from falling out of the cradle while the phone is hanging on the wall, you must reverse the handset hook (located on the base).

1. Push the handset hook up and out with your thumb, turn it over, and replace it in the slot on the base.
2. Feed the line cord through the groove and wrap the cord around the track on the bottom of the base.
3. Feed the line cord through the groove on the opposite side of the track, and plug the end into the modular telephone jack.
4. Slip the mounting holes (on the bottom of the base) over the wall plate posts and firmly slide the unit down into place.

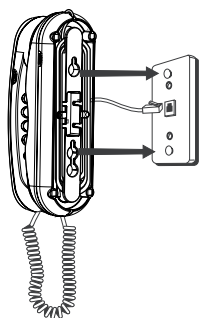

HANDSET LAYOUT

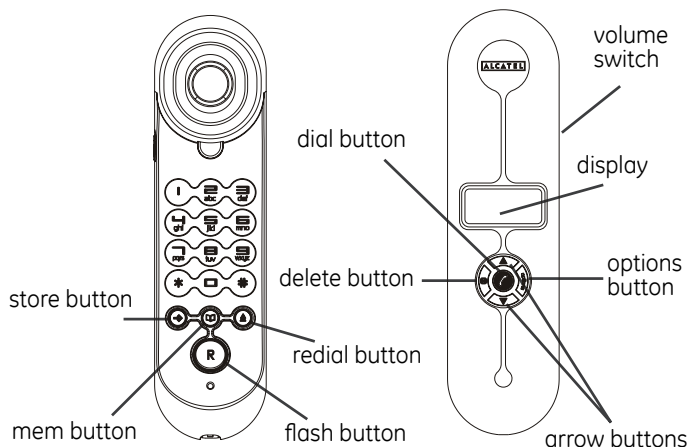 

SETTING UP THE CALLER ID MENU

IMPORTANT: Do not plug the telephone into the wall jack while setting up the Caller ID menu because an incoming call may invalidate the information not yet saved.

1. Place the handset in the cradle on the base.
2. Press the options button. SET 1 DATE appears in the display.
3. Press either ▲(+) or ▼(-) button to scroll among the 5 menu screens, which are:
SET 1 DATE
SET 2 CODE (default is ----)
SET 3 T-P
SET 4 FLASH (default is 600)
SET 5 LCD (default is 3)

NOTE: You may press delete button anytime to exit the Set Up menu. If no buttons are pressed within 20 seconds, the phone automatically exits the Set Up menu and returns to the NO CALLS summary screen.

SETTING DATE/TIME

This adjustment the Caller ID date/time.

1. To enter the options menu, press the options button. SET 1 DATE appears.
2. Press the options key to show the current setting of year.
3. Press the ▲(+) or ▼(-) keys to adjust the 1st digit, then press options to advance to next digit.
4. After set year, press the options key to set the month.
5. If you are adjusting 1st to 9th month straightaway press options key after year adjustment. If you are adjusting 10th to 12th month (two digit month), first press ▼(-) key (after the adjustment of year setting) and sudden first digit of 10th to 12th month will appear and flashing, then adjust the second digit of month with ▲(+) or ▼(-) key.
6. Repeat step 3 and 4 to set the day, hour and minute.
7. Press options button again to store the value.

The date and time will be updated, every time a FSK Caller ID message has been received

If a DTMF Caller ID has been received, then it will get the date and time from the system clock of the phone.

NOTE: The phone return idle mode if no key has been pressed for 20 seconds or press DELETE before the completion of the current operation, the phone will time out and return to the idle mode without changing the current time.

SETTING THE LOCAL AREA CODE

The Caller ID unit uses the programmed area code to determine the number format to display when a valid Caller ID signal is received.

1. To enter the options menu, press the options button. SET 1 DATE appears.
2. Press the ▲(+) or ▼(-) arrow button until SET 2 CODE appears.
3. Press the options button to show the current local area code. The default is ----. The first digit flashes, indicating it is ready to accept the area code entry.
4. Press ▲(+) or ▼(-) arrow button to choose 0-9 for the first digit.
5. When the desired number is flashing, press the option button to advance to the next digit.
6. Repeat steps 4 and 5 until all the digits for your area code are correct.
7. Press options again to store the local area code.

NOTE: If you make a mistake, you can simply repeat the previous steps until your area code is set.

SETTING THE DIALING MODE

1. To enter the options menu, press the option button SET 1 DATE appears.
2. Press ▲(+) and ▼(-) arrow button until SET 3 T-P
3. Press the option button to show (EONE)
4. Press the ▲(+) and ▼(-) arrow button to change PULSE mode.
5. Press options button again to store the value.

TO SET THE FLASH TIME

You can set the FLASH time from: 100ms / 300ms / 600ms. It allows to adjust the flash time. The default setting is 600ms.

1. To enter the options menu, press the options button, SET 1 DATE appears.
2. Press the ▲(+) or ▼(-) arrow button until SET 4 FLASH appears.
3. Press the options button to show FLASH 600(Default Selfing).
4. Press the ▲(+) or ▼(-) arrow button to change the value (600ms, 300ms or 100ms).
5. Press options button again to store the value.

SETTING THE LCD CONTRAST

This adjustment allows you to adjust the contrast and viewing angle of the display.

1. To enter the options menu, press the options button. SET 1 DATE appears.
2. Press the ▲(+) or ▼(-) arrow button until SET 5 LCD appears.
3. Press the options button to show the current contrast setting. There are 5 levels of contrast, with the default set to 3.
4. To decrease the contrast, press the ▼(-) arrow button. To increase, press the ▲(+) arrow button.
5. Press options again to store the contrast setting.

TELEPHONE BASICS

ADJUSTING THE VOLUME

You may control the listening level with the VOLUME switch, which has three levels (HI, MI,LO). It remains at the last level set until you change it.

REDIALING A NUMBER

If you want to call the last number you dialed again (up to 32 digits), use the redial feature.

1. Pick up the handset.
2. Press the redial button.
3. The last number called is automatically redialed.

MEMORY

Before you store a telephone number in memory, make sure the dialing mode is correctly set for the type of service you have. The default dialing mode is tone (touch-tone), so if you have pulse (rotary) service, you must first change the dialing mode. See "To Set the Dial Mode." The following buttons can be stored into any memory location: 0-9.

STORING FREQUENTLY CALLED NUMBERS

1. Pick up the handset.
2. Press the store button.
3. Use the handset number keys to enter the telephone number (up to 16 digits).
4. Press the store button.
5. Push the desired memory location button and press the store button.
6. Hang up the handset.

NOTE: If you make a mistake, use the delete button to delete wrong digits.

CHANGING A STORED NUMBER

Repeat the storage sequence above. The new number replaces the old number at the memory location.

ERASING A STORED NUMBER

1. Press the Dial Button.
2. Press ▲(+) or ▼(-) button to choose the memory location to be erased.
3. Press delete key and LCD show "DELETE". Press DELETE to confirm.

DIALING FREQUENTLY CALLED NUMBERS

1. Pick up the handset and press the mem button or press the dial button.
2. Press 0-9 for the memory location. The number dials automatically.
OR
1. Press dial button while the handset is still in the cradle.
2. Press the review button for the desired memory location, lift the handset and the number dials automatically.

REVIEWING NUMBERS STORED IN MEMORY

1. Press the dial button.
2. Press ▲(+) or ▼(-) for the memory location. The number shows on the display.

COPY CALLER ID MEMORY TO USER MEMORY

1. Pickup the handset.
2. Press the store button.
3. Press either ▲(+) or ▼(-) to display the number you want to copy.
4. Press the store button.
5. Press 0-9 for the memory location. The display flashes if the memory location is occupied.
6. Press store to save.
7. Press the hook switch to exit.

STORING A PAUSE IN MEMORY

The redial button has dual functionality. It becomes a pause button if the store button is pressed first. It is valid only when storing a number into memory. Use the redial button to insert a pause when a delay is needed in an automatic dialing sequence.

For example, when you must dial a 9 to get an outside line, or when you enter codes to access your long distance company.

You may need to adjust the length of the pause. It can be adjusted from 1 to 9 seconds. The default setting is 4 seconds.

1. Pickup the handset.
2. Press the store button.
3. Press the redial button.
4. Press 1-9 (1 = 1 second, 2 = 2 seconds, etc.)
5. Press store again.
6. Press the flash button or the hook switch to exit.

USING FLASH

This feature is used to activate customer calling services available through your local phone company, such as Call Waiting. If you subscribe to any of these services, please refer to the phone company's instructions on how to use flash.

To answer an incoming call while having a conversation:

- After you hear the Call Waiting tone, press and release the flash button. The first call is placed on hold while the second call can be answered.

 
To return to your first call and put the second call on hold:

- Press and release flash again. The first call can continue while the second call is put on hold.

USING TEMPORARY TONE DIALING

If you have pulse service, you can temporarily change from pulse to tone service. After dialing the telephone number, press and release the *TONE button on the telephone. This allows access to phone services that require a tone, such as banking and long-distance services. After you hang up the handset, the telephone automatically returns to pulse service.

CALLER ID (CID) FEATURES

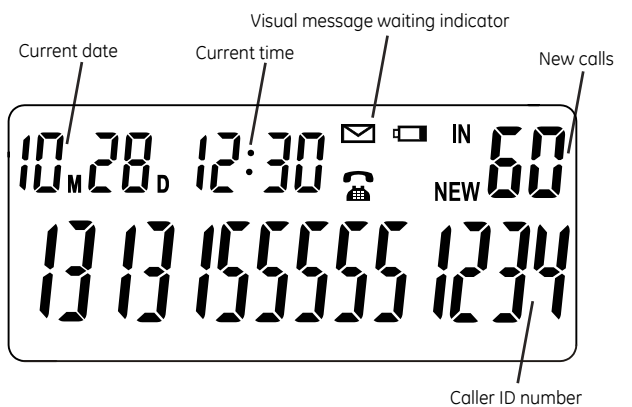

Caller ID number

SUMMARY SCREEN

The Summary Screen shows the current time, current date, and number of new calls to be reviewed. It displays until any button is pressed. Within 60 seconds of receiving a new call, the Summary Screen displays.

RECEIVING AND STORING CID RECORDS

This unit receives and displays CID information transmitted by your local phone company. This information can include the phone number, date, and time. The unit stores up to call records for later review. When the memory is full, a new call record automatically replaces the oldest call record in memory. NEW shows in the display for call records received which have not been reviewed.

REVIEWING CID RECORDS

- Press either the ▲(+) or ▼(-) down button to view the newest call record.
- Press the ▼(-) button to scroll through the call records from the most recent to the oldest.
- Press the ▲(+) button to scroll through the call records from the oldest to the newest.
- When all of the messages have been viewed, appears --End-- in the display.

DELETING CALL RECORDS TO DELETE AN INDIVIDUAL CALL

When reviewing calls, you may delete an individual call by pressing the delete button once. The display will show "DEL ONE" Press delete button again fo confirm the delete.

TO DELETE ALL CALLS

1. When reviewing calls, you may delete all calls by pressing and holding the delete button for more than 4 seconds. DEL ALL? appears in the display.
2. Press delete again to confirm.

DIALING BACK

When reviewing Caller ID records, you may dialback the phone numbers shown on the display by pressing the dial button.

IF YOU PROGRAMMED YOUR LOCAL AREA CODE IN THE SETUP MENU

1. Use the ▲(+) and ▼(-) buttons to scroll to the number you want to dial.
- If you see a number with 7 digits (i.e. 555-1234), then the call was received from within your area code. However, this does not guarantee the call is a local call.
- If you see a number with 11 digits (i.e. 1-234-555-1234), then the call received was

not from your area code.

2. Press the dial button, a 10 second timer also starts in the upper right side of the display, letting you know the time remaining until the unit returns to the Summary Screen. If you adjust the number to be dialed, the timer automatically resets itself.
3. To adjust the phone number.
4. To dial the displayed number, pick up the handset before the timer reaches 0.

IF YOU DID NOT PROGRAM YOUR LOCAL AREA CODE IN THE SETUP MENU

1. Use the ▲(+) and ▼(-) buttons to display the number you want to dial. You will only see digit numbers (i.e. 234-555-1234).
2. See steps 2 through 4 in the above section to complete the dialback sequence.

NOTE: IF PICKUP PHONE shows on the display, no other changes to the number can be made. The information sent from the telephone company is known to be a valid number to dial back (available only in limited areas). Once you pickup the phone, the number is automatically dialed.

VISUAL MESSAGE WAITING INDICATOR

When you have a message in the centralized voice mail system, this indicator will be lit, you need to contact your services provider for more details.

CALLER ID DISPLAY MESSAGES

The following special messages indicate the status of a message or the unit:
Battery power level is low. Please replace the batteries as soon as possible in order to maintain Caller ID operation.

TROUBLESHOOTING TIPS

NO DIAL TONE

- Check all cabling to make sure that all connections are secure and not damaged.
- Check the hook switch: Does it fully extend when handset is lifted from cradle?

NO DISPLAY

- Replace batteries.
- Make sure the batteries are properly installed.

NO INFORMATION IS SHOWN AFTER THE PHONE RINGS

- In order to receive Caller ID records, you must subscribe to the standard name and number Caller ID service available through your local telephone company.
- Be sure to wait until the second ring before answering.

PHONE DOES NOT RING

- Make sure ringer switch is set to HI.
- You may have too many extension phones on your line. Unplug some extension phones.
- Check for a dial tone. If there is no dial tone see solutions for "No dial tone."

OTHER PARTY CANNOT HEAR YOU

- Make sure phone cord is securely plugged in.
- Make sure extension phones are on the hook at the same time you're using the phone. It is normal for the volume to drop when additional extension phones are used at the same time.

CANNOT DIAL OUT

- Make sure the T/P dialing mode is set to the type of phone service you are subscribed to.



Used equipment must be disposed of in compliance with current environmental protection regulations. You should return it to your reseller or dispose of it in an approved recycling centre.