

aiwa

Adventure Mini IP67 | SB-X80

User Manual
使用者指南
使い手説明書
उपभोक्तागाइड
사용자 설명서
คู่มือการใช้
hướng dẫn sử dụng
प्रयोगकर्ता पुस्तिका

 
重要安全說明

1. 請不要將產品靠近任何形式的熱源。
2. 請使用原廠規格的配件。
3. 產品如果有任何故障，請交由合格的維修人員處理。
4. 請妥善保存此說明書以便日後參考。
5. 請注意所有的注意事項。

注意事項

1. 請保持產品遠離火源跟熱源。
2. 請勿嘗試拆解或改裝本產品。
3. 請勿將產品暴露在過多熱量的地方（如直射陽光…等等）。
4. 產品標籤張貼在產品底部。

包裝內容

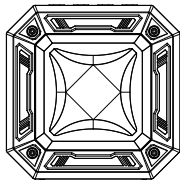

SB-X80



 
Micro USB
充電線



AUX音頻線


如果產品及配件有發生異常狀況，請聯絡當地 aiwa 授權經銷商或是客服中心

產品介紹

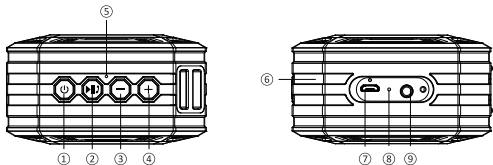



1. 電源鍵
2. 播放鍵/ 暫停鍵/ TWS 配對鍵/ 取消配對鍵
3. 減少音量/ 上一曲 (短按)
4. 增加音量/ 下一曲 (短按)
5. 麥克風
6. 充電指示燈
7. 充電線接口
8. 重置鍵
9. 音頻線接口

 產品操作 – 開 / 關機

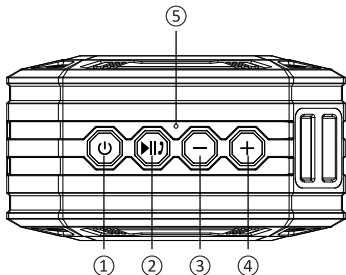

按住電源鍵 3 秒來開 / 關機。
(請參考產品介紹圖)

  產品操作 – 手機連接

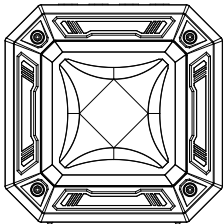


1. 將 SB-X80 開機。
2. 在您手機的設備清單中找到“SB-X80”並選擇配對。
3. 長按播放鍵/ 暫停鍵(請參考產品介紹圖)來取消連接。

請確定同時間內只有一支手機跟音箱連接

請確認耳機跟手機在有效距離內(10米)

使用模式鍵來切換撥放模式

 
產品操作 – 連接AUX音頻線

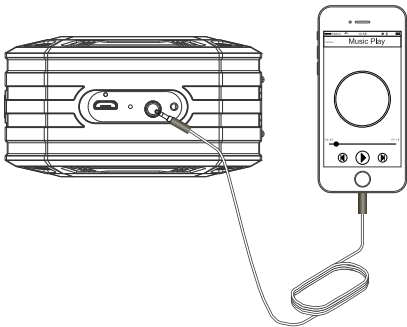

1. 將 SB-X80 開機
2. 接上 3.5mm AUX 音頻線

使用模式鍵來切換撥放模式

 產品操作 — 接聽來電

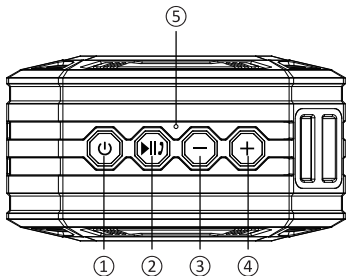


短按通話鍵接聽來電。

長按通話鍵拒接來電。

通話過程中再次短按通話鍵掛斷電話。

 產品操作 – TWS真無線立體聲

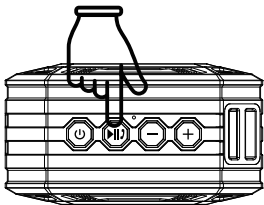


分別在 2 個音箱上快速按 TWS 配對鍵進行 TWS 配對。

連接成功後,

音箱 LED 燈快閃的 – 主機左聲道

 音箱 LED 燈長亮的 – 副機右聲道

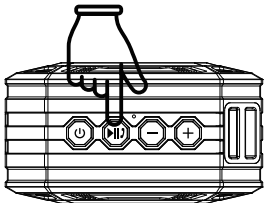


進行主機與手機的連接
(請參考產品操作 – 手機連接)。

主機長按TWS配對鍵退出 TWS 配對模式，
同時與設備斷開連接；

副機長按TWS配對鍵退出 TWS 配對模式，
主機與設備仍維持連接。

 產品操作 — 電池與充電

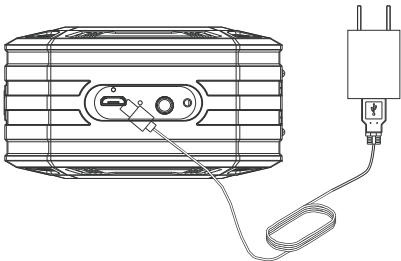


將內附的 Micro-USB 充電線插入充電口與 5V/1A的電源供應器進行充電
(電源供應器請自行選購)

充電時間- 約 3 小時
播放時間- 約10 小時

低電提醒 - 每隔15秒會發出” 嗶 ” 聲警示音， 連續 3 次後機器自動關機

 清潔與維護

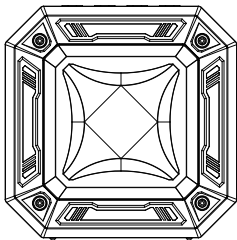

請用柔軟的乾布來擦拭 SB-X80

問題與解答

在手機設備清單上找不到 “ SB-X80 “ 或是連接不穩定？

1. 請確認您的手機與 “SB-X80” 是在有效距離範圍內。
2. 請確認 SB-X80 擁有足夠的電力。
3. 將音箱重設回到出廠設定，再重新配對一次。

在設備有效距離內還是發生斷線現象？

1. 請確認有無金屬或是其他材料太過靠近造成設備連接的干擾。

客戶服務

有關產品的更多資訊，請參考我們網站 www.int-aiwa.com。

您可以參考內附的保卡，聯絡當地的aiwa授權經銷商或是客服中心。

產品保固

請參考包裝盒中提供的保固卡。

注意：拆卸設備不在保固範圍內

規格

商品名稱：無線音箱

型號：SB-X80

喇叭功率：5W

技術版本：5.0

支援協定：A2DP, HFP, HSP, AVRCP

頻響範圍：20Hz - 20KHz

總協調失真：≤1%

無線接收距離：20公尺

電池容量：1800mAh

額定輸入電流電壓：DC 5V/1A

尺寸：85 x 85 x 46 mm

重量：215 公克

限用物質含有情況標示聲明

設備名稱：無線音箱 Equipment name 型號（型式）：SB-X80 Type designation (Type)						
單元 Unit	限用物質及其化學符號					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ^{VI})	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電路板	○	○	○	○	○	○
外殼	○	○	○	○	○	○
內部配線	○	○	○	○	○	○
揚聲器	○	○	○	○	○	○
備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. 備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. 備考 3. “-” 係指該項限用物質為排除項目。 Note 3: The “-” indicates that the restricted substance corresponds to the exemption.						

警語：經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

製造商：東莞十和田電器科技有限公司
 進口商：中華大雄股份有限公司
 地址：新北市深坑區北深路三段141巷5號
 電話：02-2662-4343
 商品原產地：中國（CHINA）

aiwa

Aiwa Electronics Int'l Co., Ltd.
Explore more at www.int-aiwa.com

aiwa

Adventure Mini IP67 | SB-X80

User Manual
使用者指南
使い手説明書
उपभोक्तागाइड
사용자 설명서
คู่มือการใช้
hướng dẫn sử dụng
प्रयोगकर्ता पुस्तिका

 
Important Safety Instructions

1. Please do not install device near any form of heat sources.
2. Please use accessories specified by the manufacturer.
3. Please refer all servicing to qualified personnel should there be any form of damage to the device.
4. Keep this user manual for future reference/ troubleshooting.
5. Please heed ALL safety cautions.

SAFETY CAUTIONS

1. Keep device **AWAY** from fire and heat sources at all times.
2. Do **NOT** attempt to disassemble or alter the device.
3. Do **NOT** expose the device to excessive heat. (Direct sunlight e.g.).
4. Product label is located at the bottom of the product.

Unboxing

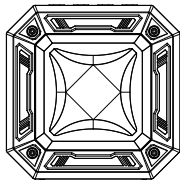

SB-X80



 
Micro USB
charging cable



AUX Cable


Please refrain from using any damaged components.
Contact your local authorised aiwa distributor/customer service

Device Overview

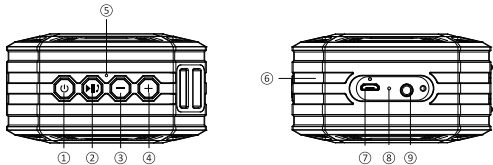


1. Power button
2. Play/ Pause/ TWS Connection/ Disconnection
3. Volume -/ Previous song (Short press)
4. Volume +/ Next song (Short press)
5. Microphone
6. Charging indicator
7. Micro USB charging port
8. Reset button
9. AUX - In Port

 Device Walkthrough - Power ON / OFF

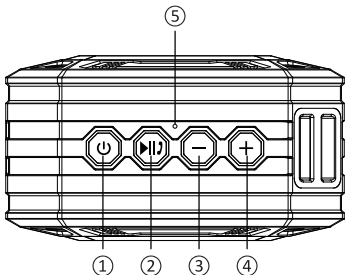

Hold power button ① for 3 seconds.
(Refer to device overview page)

 Device Walkthrough - Connection

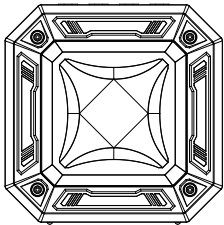


1. Power on SB-X80.
2. Find "SB-X80" in your mobile devices list and connect.
3. Long press play/pause button (Refer to device overview page) to terminate connection.

Make sure there's only one device connecting at the same time

Make sure devices are within working distance (within 10 metres)

Use mode button to interchange playback mode (as in this order)

 
Device Walkthrough - AUX Connection

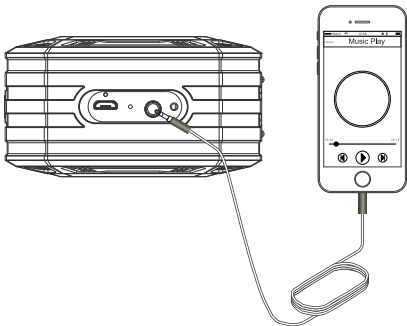

1. Power on SB-X80.
2. Connect 3.5mm AUX cable.

Use mode button to interchange playback mode (as in this order).

 Device Walkthrough - Answering Calls

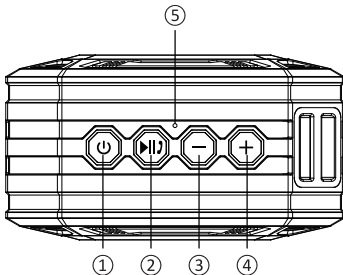


Short press - Play/Pause button to answer an incoming call.

Long press - Play/Pause button calls button to reject an incoming call.

Short press - Play/Pause button calls button to end an ongoing call.

 
Device Walkthrough - True Wireless Stereo

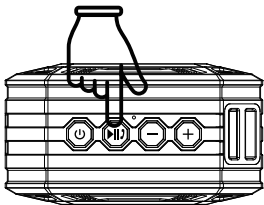

Double press play button on both devices simultaneously to establishment TWS connection.

After successful connection,

 
Device unit with flashing LED - Host unit
Device with stable LED - Secondary right channel

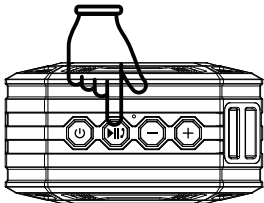

Perform connection (refer to Device Walkthrough - Connection) with Host unit.

Long press play button to terminate TWS connection.

 Device Walkthrough - Battery & Charging

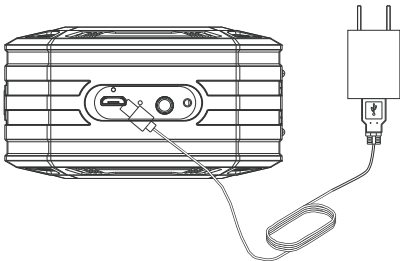


Connect Micro-USB charging cable to any power source and to SB-X80 as shown.

Charging time - Approx. **3 Hours**

Playback time - Approx. **10 Hours**

Low battery indicator - "Beep" sound every 15 seconds X 3 before device automatic shutdown

 Cleaning & maintenance

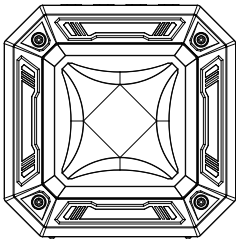

Wipe down SB-X80 with a soft dry cloth.

Troubleshooting

I can't find "SB-X80" on my device's list/ unstable connection.

1. Make sure "SB-X80" and your device are within working distance.
2. Make sure SB-X80 is charged and has enough power.
3. Re-attempt to pair again.

Disconnection occurred within working distance.

1. Please make sure there are no metals or other materials within a relatively close range which will interfere with the connection.

Customer service

For more product information please visit www.int-aiwa.com.

Contact your local authorised dealer/ customer service. Refer to the warranty label provided in the box.

Limited Warranty

Please refer to the warranty label provided in the box.

Note: Disassembling device voids warranty.

Device specifications

Model - SB-X80

Rated power - 5W

Technology - V5.0

Bluetooth Profile - A2DP, HFP, HSP, AVRCP

Frequency response - 20Hz - 20KHz

THD - $\leq 1\%$

Connection Range - 20M

Battery Capacity - 1800mAh

Speaker Dimension - 85 x 85 x 46 mm

Weight - 215g

aiwa

Aiwa Electronics Int'l Co., Ltd.
Explore more at www.int-aiwa.com