

材質: 128g雙銅紙, 成形尺寸: 100x100mm, 顏色: 單黑, 雙面列印風折頁(不打釘) 背面(中文)



刀模线

閱讀方向

閱讀方向



AA-K21S 使用說明書



為了便於您正確地操作本產品, 在使用前請仔細閱讀本說明書。
(圖片僅供參考, 產品以實物為準)

AIWA Electronics International Co., Ltd.
Explore more at www.int-aiwa.com


警語

裝水時, 請勿超過MAX水位線 (約為八分滿), 避免開水沸騰後, 部分的開水可能會流到電源底座上。

宣告

本手冊經仔細檢查及核對, 但不排除併寫及技術錯誤之可能, 此種錯誤或疏漏將於新版予以修正。本手冊之全部內容, 本公司享有隨時修改之權利, 且不予另行通知。

產品簡介

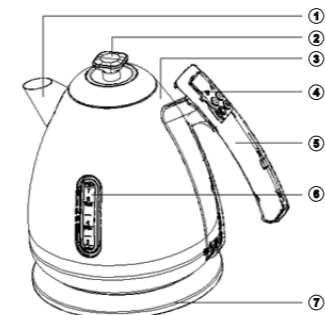

- ① 壺嘴
- ② 壺蓋
- ③ 壺身
- ④ LED控制面板
- ⑤ 手柄
- ⑥ 水尺
- ⑦ 電源底座

注意: 產品圖片跟實物略有不同時, 請以實物為準。

控制面板



圖案	說明
	開/關鍵
	保溫鍵
	溫度增加鍵
	溫度減少鍵
	溫度螢幕

功能操作說明

- 將額定容量內的水裝入水壺中, 放在電源底座上, 接通電源, 溫度螢幕顯示實際溫度。
- 按開關鍵, 按一下開始燒水, 指示燈亮起, 同時溫度螢幕顯示100°C閃爍三次, 默認燒水至沸騰100°C, 然後溫度螢幕回到實際溫度。
- 按保溫鍵, 按一下保溫指示燈亮起, 同時溫度螢幕的溫度數字開始閃爍, 此時可按鍵向下調整溫度, 每5度一段, 最低保溫至40°C。或按鍵向上調整溫度, 每5度一段, 最高保溫至90°C。保溫期限2小時。
- 可同時啟動燒水和保溫功能, 按開關鍵和保溫鍵同時進入燒水和保溫狀態, 兩個指示燈同時亮起, 按正負鍵調整至指定保溫溫度, 水沸騰至100°C後自動進行降溫至指定保溫溫度。
- 再次按開關鍵, 指示燈熄滅, 溫度螢幕顯示實際溫度, 水壺進入待機狀態。待機時間最長為4小時, 期間若無任何操作, 水壺自動斷電。
- 長按開關鍵, 水壺停止所有功能, 進入關機狀態。

限用物質含有情況標示聲明書

單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻Hexavalent chromium (Cr ⁶⁺)	多溴聯苯Polybrominated biphenyls (PBB)	多溴二苯醚Polybrominated diphenyl ethers (PBDE)
設備名稱: 電茶壺 Equipment name	型號 (型式): AA-K21S Type designation (Type)					
外殼	○	○	○	○	○	○
內部線材	○	○	○	○	○	○
PCB組件	○	○	○	○	○	○
發熱器	○	○	○	○	○	○
電源線	○	○	○	○	○	○
插接器	○	○	○	○	○	○

備考1: “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2: “○”係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3: “-”係指該項限用物質為排除項目。
Note 3: The “-” indicates that the restricted substance corresponds to the exemption.

安全注意事項

- 請在使用前仔細閱讀“安全注意事項”, 並以正確的方法使用, 避免使用不當而造成損壞或危險。
- 請在理解本部分的內容後閱讀使用說明書, 並在閱讀之後妥善保管, 以便本產品的所有使用者都可以隨時查閱。
- 本產品輸入電源為110V~60Hz, 請確認後再使用。
- 如果電源線損壞, 為避免危險, 必須由製造工廠或其維修部或類似的專業人員進行維修, 切勿自行拆卸修理, 以免發生危險。
- 在注水、清洗或不使用時, 請關閉水壺開關並拔下插頭。
- 注水時, 注意不要把水沾到底座下面, 且連接電源底座前, 先用乾布把底座下方的水珠擦乾, 避免觸電或短路產生危險。
- 裝水量不要超過最高水位線, 否則沸水可能會濺出造成危險。
- 請在水平面上使用本產品。
- 電源線懸垂容易引起事故, 建議在燒開水時, 儘量把水壺靠近牆邊電源插座位置, 以免絆倒水壺被開水燙傷。
- 為了避免燙傷, 在使用水壺前, 請務必確認壺蓋已正確蓋好。
- 加熱過程中, 不要打開壺蓋或者移動水壺, 以避免被燙傷。
- 切勿將本產品和電源線浸入到任何液體中, 以免發生危險。
- 在室溫低於攝氏0度時, 請勿讓水壺電源一直和電源插頭連接, 否則溫控器會自動復位導致元件發熱。
- 不要讓水壺乾燒, 在不使用時, 請務必切斷電源。
- 本產品必須和本公司提供的電源底座配套使用。
- 本產品只能用於加熱水, 不能用於其他用途, 切勿向水中加入速溶飲料、咖啡、湯、牛奶等物質。
- 倒開水時, 要小心緩慢, 以免開水濺出燙傷人。
- 使用的電源插座要帶有良好的接地三芯電源插座。
- 拔插插頭, 注意不能拉扯電源線, 要用手指緊握插頭拔出。
- 手濕時, 不要操作本產品。

- 確保電茶壺移開電源底座前, 已關掉電源開關。
- 本產品不預期提供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用, 除非在對其負有安全責任的人員之間或指導下安全使用。
- 孩童應受監護, 以確保孩童不嬉玩電器。
- 本產品僅適用於家庭使用, 請勿使用於商業和其他用途。
- 使用後加熱元件使用表面可能有餘溫。
- 電茶壺使用時或煮沸後, 禁止用手或身體等任何部位, 摸到或碰到壺身, 以免發生燙傷所導致之危險。
- 電茶壺為沸騰狀態時, 冒出的水蒸氣溫度極高, 不可直接用身體的任何部位接近壺嘴(出水口)、壺身、壺蓋或是壺蓋與把手之間的縫隙, 以免灼傷、燙傷之危險。

清潔與保養

- 每次清潔水壺前, 要拔下電源插頭並讓水壺冷卻。
- 切勿將水壺、電源線、電源插頭和電源座浸於水中。
- 用濕布擦拭水壺外殼, 請勿使用擦洗粉、清潔膏等產品, 他們會損傷水壺的表面。

清除水垢

使用過程中, 水中礦物質成份會附在金屬上, 形成“水垢”, 但對人體無害。為了保持水壺良好的工作狀態, 需要經常清除水垢。如果出現燒水過程提前斷電, 表明您的水壺需要清理水垢了。可以用下面的幾種方法來清除水垢:

- 使用水壺專用的除垢產品, 按照產品說明進行。
- 在壺中加入0.5升8-10度的白醋, 放置浸泡1小時後, 倒掉白醋, 用清水清洗4-5次。
- 加入0.5升的水燒開, 然後加入25克的檸檬酸, 浸泡15分鐘, 用清水清洗4-5次。

規格

額定電壓: 110V	最大容量: 1.7L
額定頻率: 60Hz	總額定消耗電功率: 1800W

常見問題分析

問題	可能原因	解決方法
水壺不工作	電源插頭是否插好	插好電源插頭
	電源線是否損壞	送維修部門維修
	水壺乾燒過熱保護	等待水壺冷卻
水中有輕微異味	首次使用	加至最高水位煮一次
	煮水後還存在異味	加至最高水位, 加入2勺小蘇打 水煮開後倒掉
水煮沸前水壺提早斷電	壺內是否有水垢	除水垢
電	壺中有水垢生成 或是	除水垢
壺中的水變渾濁	當地水質較硬, 水中的碳酸鈣和碳酸鎂引起的	除水垢

產品保證書

機型: AA-K21S 電茶壺

顧客姓名	經銷商確認章
購買日期	
店名	
電話	

--- 購買日期請詳填, 並加蓋經銷商店章, 否則無效 ---

- 保證內容**
- 購買日起, 保固一年。在正常使用下故障, 本公司負責免費維修。若為經常性置換之耗材, 則不在此限。
 - 本公司產品皆經過嚴密檢查與試驗, 請安心使用。
 - 本公司無提供到府服務。由客戶自行送達經銷商 (或原銷售點)

- 注意事項**
- 如有下列情形之一者, 雖在保固期內, 恕不免費更換零件或維修服務。
 - 電源規格不符、濫用、過失或其他不當使用 (保養) 等情事。
 - 蟲鼠或公毒、蟻、蟻、壁虎、等蟲害。
 - 硫磺地區、海邊化學工廠、沼氣、浸水... 等在環境因素。
 - 由於天災地變及其他人力所不能抗拒的因素所發生故障或毀損 (如颱風、地震、水災、安裝不良或雷擊, 運送摔機等)
 - 使用於營業地點、工廠或公共場所 (非家用) 之商品。
 - 使用或清潔保養時摔機, 擅自拆裝或修改, 而導致損壞。
 - 本公司之各商品均有零件更換保證期限, 若超過期限, 本公司盡量以現行商品之零件代用維修, 如無法修復, 敬祈見諒。
 - 保固期間外之服務, 並未更換零件, 得依本公司之價格表收取費用。

委製廠商: 愛華國際股份有限公司
 總代理商: 中華大捷股份有限公司
 地址: 新北市深坑區北深路三段141巷5號
 電話: (02) 2662-4343
 北部服務電話: (02) 2662-4343
 中部服務電話: (04) 2261-0978
 南部服務電話: (07) 395-7147
 商品原產地: 中國 (CHINA)

AIWA Electronics International Co., Ltd.
Explore more at www.int-aiwa.com

材質: 128g雙銅紙, 成形尺寸: 100x100mm, 顏色: 單黑, 雙面列印風折頁(不打釘) 正面(英文)



刀模线

閱讀方向 →

閱讀方向 ↓



AA-K21S User Manual



AIWA Electronics International Co., Ltd.
Explore more at www.int-aiwa.com

Intended use

This Electric Kettle is intended for private use & for boiling drinking water only. It is not suitable for use with other liquids and should not be used commercially.

This appliance fits all the relevant norms and standards related to the CE conformity standards. Any attempt to modify, alter, dismantle the appliance is dangerous and may result in the product being no longer safe to use and failing to meet the relevant conformity standards.

Technical specifications

Model: AA-K21S
Operating voltage: 220 -240V AC, 50-60HZ
Power: 1850 W to 2200 W
Power cord length: 75cm
Capacity: 1.7 (Max) Liters
Indicators: power indicator when kettle is switched on Safety class I

Safety Instructions


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- For household use only.
- If the kettle is overfilled, boiling water may be ejected.
- The kettle is only to be used with the stand provided.

- Warning: Avoid spillage on the connector
- Warning: Potential injury from misuse
- The heating element surface is subject to residual heat after use.
- The appliance must not be immersed.
- Do not remove the lid while the water is boiling
- Position the lid so that steam is directed away from the handle.

Product Description

- SUS304 Stainless Steel Body
- British Strix Controller
- Real time water temperature LED display
- Designed to heat water up to the designated temperatures for various uses (Different temperatures of water required for different beverages; Coffee, Tea etc.)

Product Overview

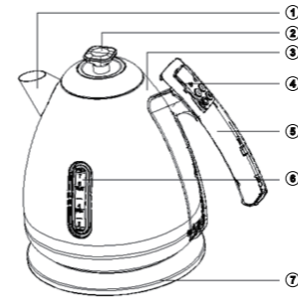

- Spout
- Lid
- Kettle Housing
- LED Display Control Panel
- Handle
- Water Gauge
- Base Plate

OPERATING INSTRUCTIONS



ICON	DESCRIPTION
	On / Off button
	Keep warm / heat up
	Temperature up button
	Temperature down button
	Display

Before first use

- Remove all stickers, protective foils and plastics from the device.
- Place kettle on a flat, stable surface and ensure a minimum of 10cm free space around the kettle.
- The kettle is not suitable for use in a cabinet or outside use.
- Before first use, please boil a full kettle of water to clean to kettle. Discard the water afterwards.
- Connect the power plug to a suitable socket. (Please make sure the indicated voltage on the device matches the local voltage before connecting the device. Voltage 220V-240V, 50-60Hz)

Operating Instructions

Thermal safety cut-out

The pre-set thermal safety cut-out protects the heating element from overheating should the appliance be erroneously switched on without any water, or if the heating plate is calcified. If the safety cut-out is activated, the appliance cannot be switched on again. In such a case, the appliance must be allowed to cool down or must be descaled before it is switched on again.

Always fill up the kettle to a SAFE water level.
MINIMUM SAFE WATER LEVEL: 500ml
MAX. SAFE WATER CAPACITY: 1.7 L

Boil to 100 °C (DEFAULT SETTING)

Plug it to a suitable power source and press the ON/OFF button to turn on the kettle. The kettle will power off automatically after 3 minutes.

Heat to desired water temperature and keep warm

Adjust target temperature using buttons. (± 5 °C)

Minimum Temperature: 40 °C
Maximum Temperature: 90 °C

Press the ON/OFF button to confirm and start heating.

KEEP WARM function will be automatically triggered upon reaching the desired temperature. (120 Minutes)

This function can be cancelled by pressing the ON/OFF button again.

Cleaning and Maintenance

- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Use a soft damp cloth to clean the housing of the device.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the kettle and base in water or any other liquids.
- The device should be regularly decalcified. Use a descaling product which is suitable for household appliances.
- Rinse the kettle several times with clean water after descaling.

Troubleshooting

Problem	Possible causes	Suggested solution
Functions cannot be activated	Appliance is not plugged in	Connect the plug into the socket
	Socket is defective	Check the socket with different appliance
	Appliance is not placed on base correctly	Position it properly
Water doesn't heat up	Safety cut-out is activated	Appliance needs to cool down or be descaled
	The water container temperature is higher than that selected	Select a higher temperature
Heating-up takes longer than expected	Build-up of scale deposits	Descale the appliance
Increased noise during heating	Build-up of scale deposits	Descale the appliance

Environment

This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.



AIWA Electronics International Co., Ltd.
Explore more at www.int-aiwa.com

E-Manu



Mandrops AG
Bahnhofstrasse 17
96106 Ebern
Germany