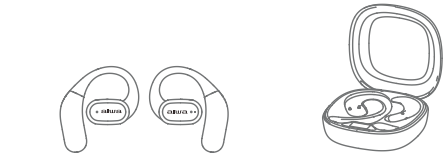
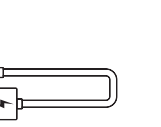
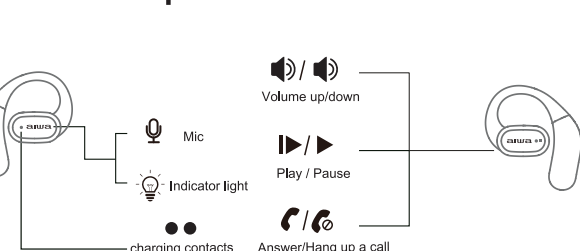
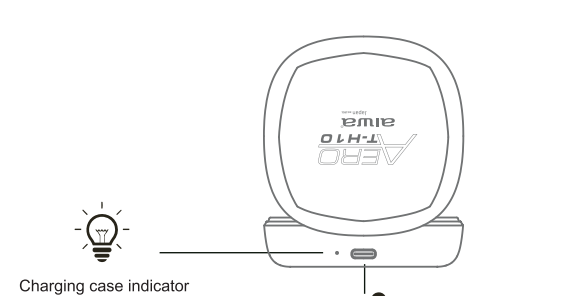
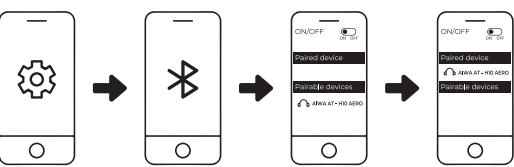


■ 黑色單色印刷

   	Product Schematic Picture     Packaging List - AT-H10 AERO Earbuds - Portable Charging Case - Braided Nylon Type-C Charging Cable - User's Manual - Cotton - Linen Blend Fabric Pouch	Product Specifications Model Number : AT-H10 AERO BT Version : V5.4 Waterproof Level : IPX4 Rated Voltage/Current : 5V / 1A Rated Power : 20mW Frequency Response : 20Hz-20KHz Battery : (Earbuds) 37V / 55mAh (charging case) 3.7V / 600mAh Supported Profiles : A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDP, L2CAP Audio Decoding : AAC, SBC Impedance : 16Ω ± 15% Sensitivity : 92.6dB ± 3dB Transmission Distance (Estimated) : 10 meters (No Obstacles) Working Time : 8 hours (approx.) Earbuds + Charging Case Standby Time : 600 days (approx.) Charging Time (charging case with earbuds) : 2 hours (approx.) Earbuds Weight : 8 g each Charging Case Weight : 62 g *The case's battery is able to charge the earbuds 3.5 times.*	Schematic diagram of product operation  	Product Instructions for Use ► Power ON: Automatic power ON: - Take the earphones out from the charging case. - The earphones will turn on automatically & enter into pairing mode. * Before using it for the first time, make sure the earphones are fully charged.* ► Power OFF: Automatic power OFF: - Put earbuds back into the charging case. ► Music Control <table border="0"> <tr> <td>Play / Pause</td> <td>Single-click L / R touch sensor (1)</td> </tr> <tr> <td>Next Song</td> <td>Triple-click R touch sensor (3)</td> </tr> <tr> <td>Previous Song</td> <td>Triple-click L touch sensor (3)</td> </tr> <tr> <td>Volume +</td> <td>Double-click R touch sensor (2)</td> </tr> <tr> <td>Volume -</td> <td>Double-click L touch sensor (2)</td> </tr> </table>	Play / Pause	Single-click L / R touch sensor (1)	Next Song	Triple-click R touch sensor (3)	Previous Song	Triple-click L touch sensor (3)	Volume +	Double-click R touch sensor (2)	Volume -	Double-click L touch sensor (2)	Connecting the Product  - Turn on Bluetooth (BT) on your mobile device (cellphone or Tablet). - Remove earphones from the charging case and connect to "AIWA AT-H10 AERO" from your Bluetooth device. - The earbuds indicator light will power off after successful connection.	Trouble Shooting L earbud can't pair with R earbud. - Put earbuds back into the charging case and close it. Then open the cover again and take the earbuds out from the case. The L earbud will pair with the R earbud automatically and wait for connection. If the above solution doesn't work, clear the pairing record according to the following methods: - Disconnect the Bluetooth pairing from the mobile device. - Take out a single earbud (disconnected from the mobile device), click 4 times on the touch sensor, and put it back into the charging case. - Take out the other earbud and repeat the above method. This will clear the pairing record. - Take out both the L and R earbuds. They will pair with each other and wait for connection with the mobile device. Earbuds can't pair with mobile device Earbuds will pair with the latest device automatically after taking them out from the case. If they don't, you need to connect them manually. **Attention** Earbuds will power off automatically if the disconnection time or pairing time is more than 3 minutes.	Battery Capcity & Charging ► Low power of earbuds It will remind you with a prompt every 1 minute and a red light flashing once every 5 seconds. Put the earbuds back into the case to charge. ► Low power of charging case The unit digit of the LED power display screen will flash 6 times and then turn off to indicate low battery. Please charge it using a standard adapter.  Place the earbuds into the charging case, and the case will start charging the earbuds. The red charging indicator light on the earbuds will stay on, and it will turn off when fully charged. The charging time is approximately 1.5 hours.	Note : - Please ensure the earbuds are fully charged before using them for the first time. - Make sure to charge the battery to 100% each time. Frequently charging with insufficient power may cause battery performance to decline. - To extend battery life, fully charge the battery at least once every 45 days. If not used for a long time, please charge it before use. 	   AIWA Electronics International Co., Ltd. Explore more at www.int-aiwa.com
Play / Pause	Single-click L / R touch sensor (1)																		
Next Song	Triple-click R touch sensor (3)																		
Previous Song	Triple-click L touch sensor (3)																		
Volume +	Double-click R touch sensor (2)																		
Volume -	Double-click L touch sensor (2)																		